

## OPERATING MANUAL

READ ALL INSTRUCTIONS  
BEFORE USING

MODEL DK-107  
MOVING KNEADING MASSAGE CUSHION



### FUNCTION

1. Movable massage structure at back
2. 2 vibration motors at buttock
3. Auto/Manual massage mode
4. 15 minutes timer
5. Used at home and office
6. AC adapter and 12V car adapter included

### OPERATION

1. Connect either the AC or DC adapter to the cushion and outlet, press power switch, then the unit stands by and the power led is on; press again to shut it off.
2. When the unit stands by, press function button to choose working mode.
3. To shut off this unit during working, please press the power switch, the LED will

flash and the vibrating motor stop working, then the kneading part moves to the bottom; then the LED is off and this unit stops working.

4. When in working and no buttons are pressed, after 15 minutes, the unit will power off automatically (from the last time when the user press any button). The process of power off is the same as step 3.
5. The function buttons are enabled when in stand by mode or working mode.

### BUTTONS ON CONTROLLER



### MOVING KNEADING FUNCTION BUTTON

1. FULL: Press this button, the LED turn red, this unit massage your full back by moving kneading. Press again the LED be off and this function off. Press other moving kneading function buttons, the unit changes to other working mode.
2. UPPER: Press this button, the LED turn red, this unit massage your upper back

by moving kneading. Press again the LED be off and this function off. Press other moving kneading function buttons, the unit changes to other working mode.

3. LOWER: Press this button, the LED turn red, this unit massage your lower back by moving kneading. Press again the LED be off and this function off. Press other moving kneading function buttons, the unit changes to other working mode.

#### **VIBRATION BUTTON**

1. SKILL: Press this button to select vibrating mode, total 3 modes.
2. STRENGTH: This button effects only when the vibrating motor is working. Total 3 strength modes (weak-middle-strong), default mode is weak.

#### **DEMO BUTTON**

This button effects when the power connected. Press this button then this unit works in DEMO mode, the cushion starts to moves from up to bottom then to up with kneading function, in weak vibrating mode; then from up to bottom then to up in middle vibrating mode; and then from up to bottom then to up in strong vibrating mode. After that the cushion restores to previous working mode. If during working in DEMO mode, DEMO button is pressed again, then the cushion power off, the progress of power off is the same as step 3.

#### **CAUTION**

- I If you have any concerns regarding your health, consult your doctor before using this product.
- I If you experience pain in a muscle or joint for a prolonged period of time, discontinue use and consult your doctor. Persistent pain could be a symptom of a more serious condition.
- I Do not use the massage motors or heat for longer than 30 minutes. Extensive use could lead the product to becoming excessively hot. Should this occur, discontinue use and allow the unit to cool before operating.
- I Use only the adapter supplied with this product.

#### **CLEAN**

- I Disconnect from power source before cleaning.

- I Do not place in any liquid to clean. Clean fabric cover by wiping with a damp sponge, using a mild detergent or suds. Pat dry with clean, dry cloth.
- I Do not use abrasive cleaners, brushes, gasoline, kerosene, glass/furniture polish, paint thinner or water hotter than 120 F to clean the unit.

#### **STORE**

Place this unit in its box or safe, dry, cool place. Avoid contact with sharp edges or pointed objects, which might cut or puncture the fabric. Do not wrap power cord around the unit. Do not hang the unit by the power cord.